

UNIVERSAL

UNIVERSAL

UNIVERSAL

UNIVERSAL

SILICON CARBIDE

SILICON CARBIDE

SILICON CARBIDE

SILICON CARBIDE

IGN-001



TRUE  START[®]

Hot Surface
Igniter



Includes
universal
electrical plug
connection kit



Includes
universal
bracket kit

18 month warranty



Made in
U.S.A.



IGN-001



TRUE  START[®]

Hot Surface
Igniter




UNIVERSAL

SILICON
CARBIDE



800.995.2222
www.diversitech.com

L46-267

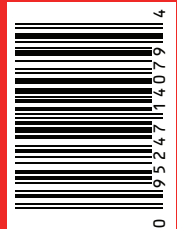


0 95247 114079 14

IGN-001 Installation Instructions

FAILURE TO READ AND FOLLOW ALL INSTRUCTIONS CAREFULLY BEFORE INSTALLING OR OPERATING THIS IGNITER COULD RESULT IN IMPROPER OPERATION OF THE APPLIANCE CAUSING PERSONAL INJURY OR PROPERTY DAMAGE.

PRECAUTIONS: Installation should be done by a qualified heating and air conditioning serviceman or licensed electrician. All wiring must comply with local and national electrical codes and ordinances. Following the installation or replacement of the igniter, follow the manufacturer's recommended installation/service instructions to check for proper operation.

WARNING: failure to comply with the following warnings could result in personal injury or property damage.

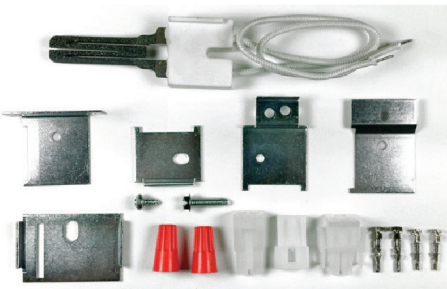


SAFE INSTALLATION PROCEDURE:

1. Disconnect electrical power and gas supply to appliance or furnace and remove HSI igniter.
2. Cut the 2 wires of the burnt-out igniter 3-4 inches from ceramic block.
3. Compare the old ceramic block with the new parts in kit and select the appropriate metal bracket to best match the original igniter. (See images to right)
4. Connect existing wires to the new igniter and use the 2 ceramic wire nuts to complete the connection. Ensure that the 2 wire nuts are tightly secured for proper electrical connection.
5. Re-install the new igniter in the reverse order of removal.
6. Test the appliance or furnace several times for proper ignition.

Warranty is for burnt out only.

Do not use this igniter for any other application.

 ORIGINAL



REPLACEMENT

