


QUICK-SLING®

by **DIVERSiTECH**®

QSWB2005

**Please adhere to all local laws and building codes*

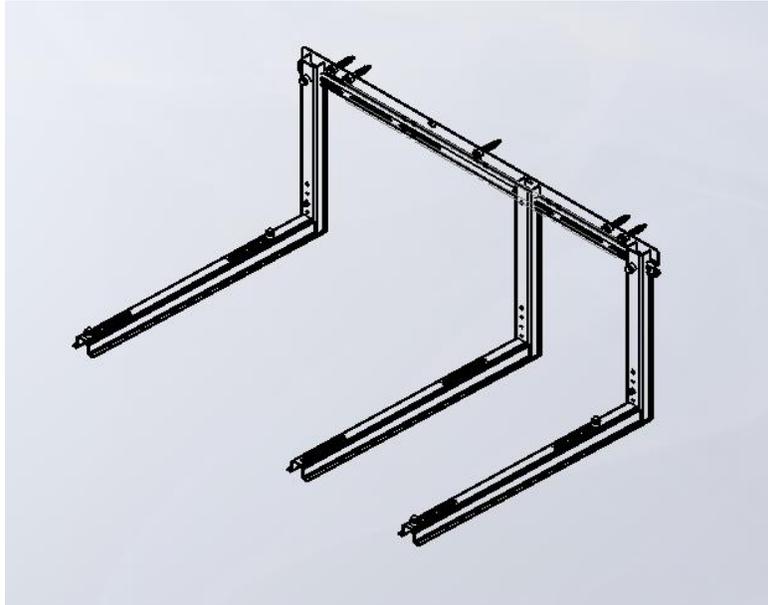

Included:

- (1) Glider Track
- (3) "L" Bracket Bars
- (1) Bag of hardware

Max Capacity 350 lbs.

**Do not exceed 175 lbs. per L bracket*


Hardware Included:

- (3) 1/4in-20x2in Carriage Bolt
- (6) 1/4in-20 Hex nut Stainless
- (3) 1/4in Bonded Washer
- (3) 3/8in-16x1 3/4in HexTapBolt Zinc
- (6) 3/8in Galvanized Hex Nuts
- (6) 3/8in Split Washer Galvanized
- (3) Spring Nut
- (12) 3/8in Galvanized Washer
- (3) 3/8in Zinc Washer
- (6) 5/16in x 3in Hex Lag Screw
- (6) 5/16in Shield
- (6) 3/8in-16x1.5in Galvanized Bolt
- (15) 1x.375x.375in Rubber Washer
- (6) 5/16in USS Flat Washer

**Carriage Bolt prevents vinyl siding from crushing.*

Quick-Sling 391 West Water St. Taunton, MA

P:1-800-995-2222 F:1-800-699-0423
www.Quick-Sling.com

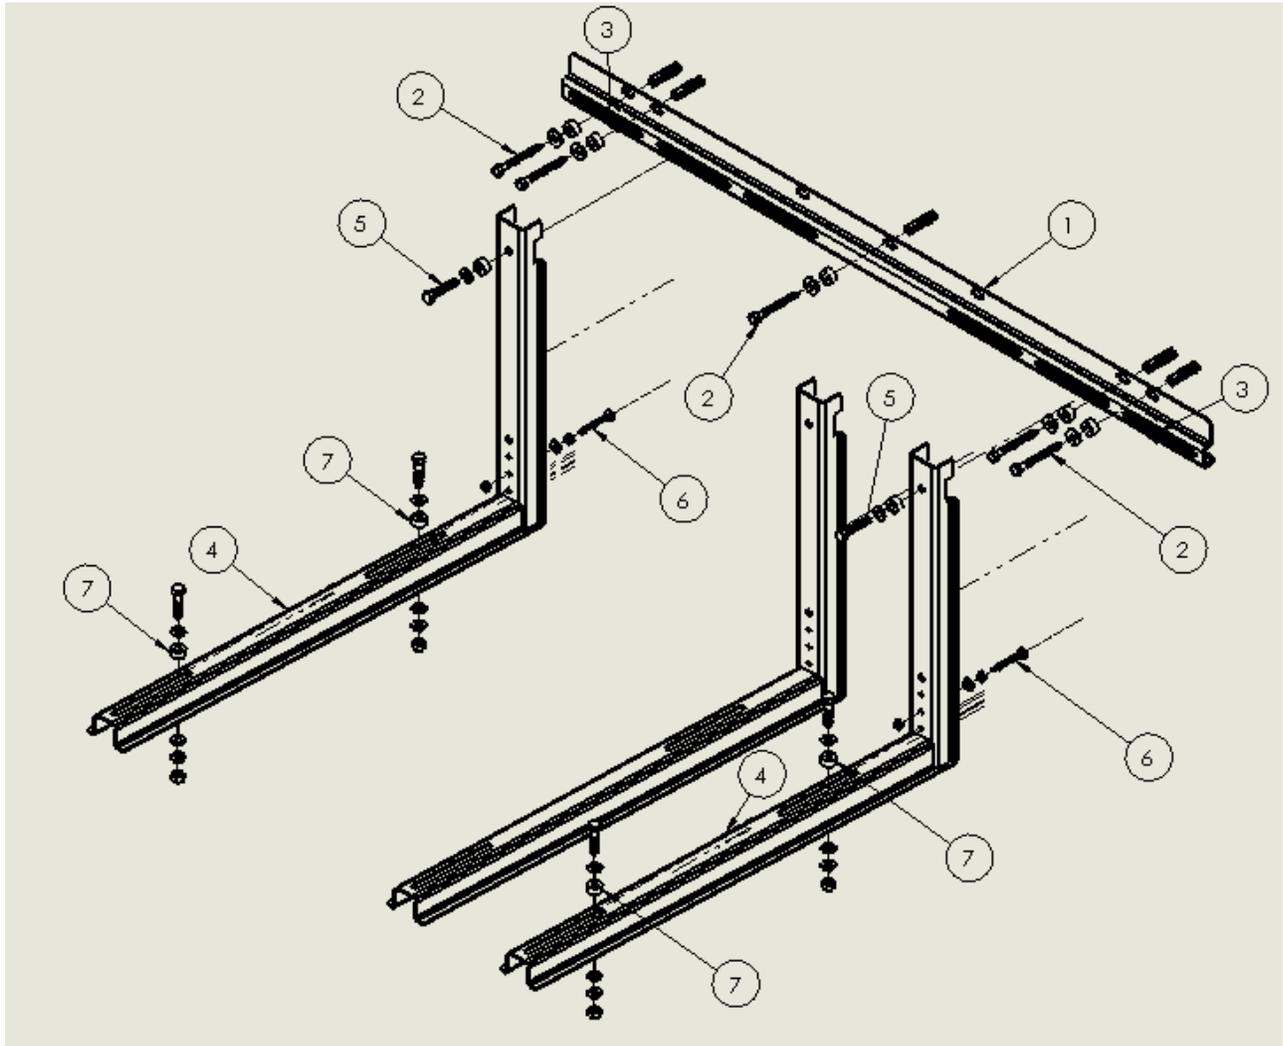

Step 1: Remove the three wall mounted bracket parts and bag of hardware from the box.

Step 2: Mount the straight QS glide track (1) to the wall using the three lag bolts (2) provided.

Step 3: Install the spring nuts (3) into the ends of the QS glide track (1) and slide them to the desired location.

Step 4: Mount the L-bars (4) to the glide track by using the hardware provided. (Note: Insert the 1" 3/4x3/8 bolts (5) and washers thru the L-bar into the spring nuts (3))

Step 5: Insert 1/4x20 carriage bolt (6) with nut through back side L bar (4). Place rubber washer (7) and nut on front of L Bar. Adjust to have carriage bolt sit flush to siding.

Installing a Dual Fan Condenser: tie the top of the unit to the wall so the bracket can resist wind pressure.